


HONDA 1100 cc Shadow Spirit 1998-2007

PIECES INCLUSES	PARTS INCLUDED
1 Attache	1 Hitch
1 Boule 1-7/8"	1 Ball 1-7/8"
1 Plaque de chaîne de sécurité	1 Safety chain plate
2 Tiges aluminium - 13" cc (2 boulons 5/16x3/4", 2 rondelles frein, 2 capuchons chrome 5/16)	2 Aluminium holders - 13" cc (2 bolts 5/16x3/4", 2 lock washers, 2 cap nut 5/16)
1 Boulons 3/8 x 1"	1 Bolts 3/8 x 1"
1 Écrous nylon 3/8	1 Lock nut 3/8
1 Rallonge chrome	1 Chrome extension

- 1- Enlever la pédale arrière côté gauche et boulonner sous le trou de la pédale.
- 2- Côté droit boulonne sur support de tuyau d'échappement (rallonge fournie peut être requise).
- 3- Bras d'aluminium se fixent au côté des clignotants.

- 1- *Left side, take off rear foot peg and bolt under foot peg hole.*
- 2- *Right side bolts on muffler bracket under muffler (supplied extension may be required).*

Holder on rail beside flashers

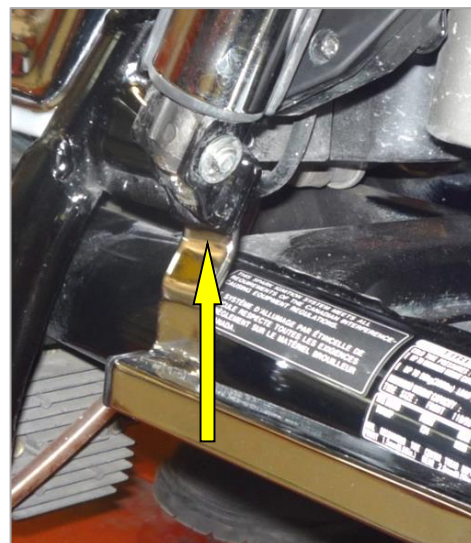

ATTENTION ! L'installateur a la responsabilité de s'assurer que tout, y compris les composantes préassemblées, soit bien serré avant d'utiliser la moto.

It is the installer's responsibility to ensure that all of the fasteners (including preassembled) are tightened before operation of the motorcycle.