


HONDA 1100 cc Shadow Aero 1998-2002

PIECES INCLUSES	PARTS INCLUDED
1 Attache	1 Hitch
1 Boule 1-7/8"	1 Ball 1-7/8"
1 Plaque de chaîne de sécurité	1 Safety chain plate
2 Tige aluminium 12 1/2" cc (2 boulons 5/16x3/4", 2 rondelles frein, 2 capuchons chrome 5/16)	2 Aluminium braces 12 1/2" cc (2 bolts 5/16x3/4", 2 lock washers, 2 cap nut 5/16)
1 Boulon 1/4x 1-3/8"	1 Bolt 1/4 x 1-3/8"

- 1- Côté droit boulonne sous pédale arrière.
- 2- Remplacer la tige supportant la pédale par un boulon qui tiendra l'attache.
- 3- Côté gauche boulonne sur le châssis de la moto.
- 4- Bras d'aluminium boulonne à l'arrière du support chrome de l'aile arrière.

- 1- *Right side bolts under rear foot peg.*
- 2- *Replace the pin holding the foot peg by a bolt that will also hold the hitch.*
- 3- *Left side bolts on frame.*
- 4- *Holder bolt on rear fender on last bolt on chrome rail.*

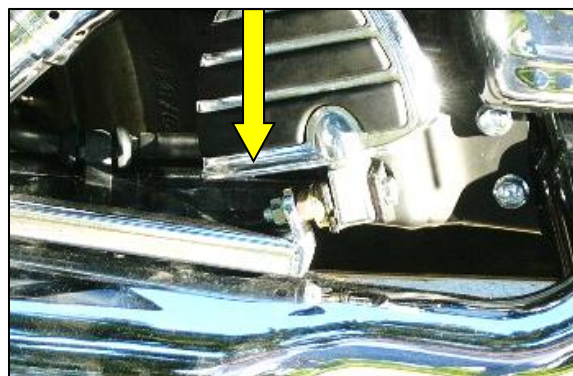

ATTENTION ! L'installateur a la responsabilité de s'assurer que tout, y compris les composantes préassemblées, soit bien serré avant d'utiliser la moto.

It is the installer's responsibility to ensure that all of the fasteners (including preassembled) are tightened before operation of the motorcycle.