
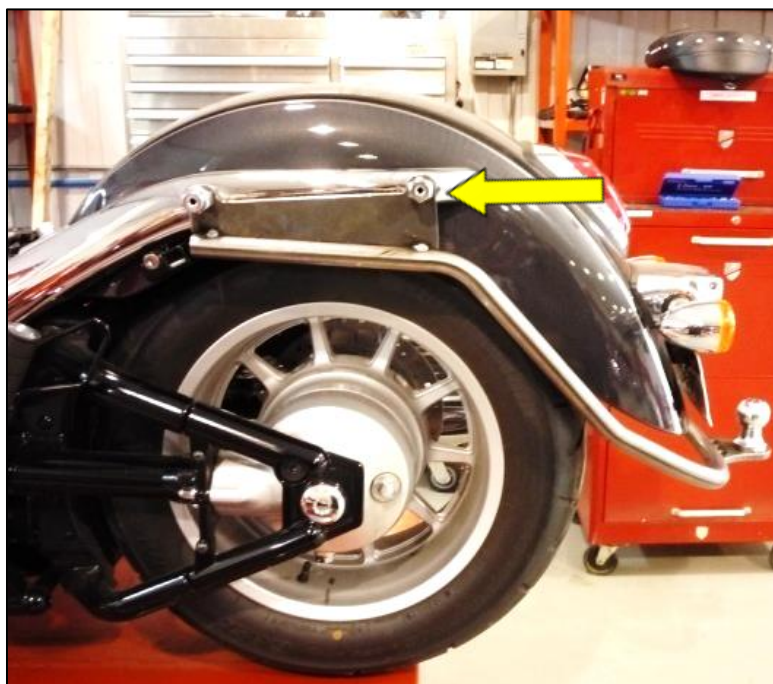


SUZUKI 1800 cc Boulevard C109R - RT 2008-2011

PIECES INCLUSES		PARTS INCLUDED	
1	Attache	1	Hitch
1	Boule 1-7/8''	1	Ball 1-7/8''

- 1- S'attache aux trous prévus pour les supports de valises.
- 2- L'attache se fixe sur la rampe chromée des supports de valises.
- 3- Vous devez enlever le réflecteur latéral définitivement.
- 4- Les boulons des valises sont assez longs, vous allez prendre la bague d'en avant pour la localiser en arrière et 3 rondelles sont fournies pour installer à l'avant.

- 1- *To be attached to the holes designed for the saddle bags support.*
- 2- *The hitch attach to the chrome strut.*
- 3- *You will permanently take off the lateral reflector.*
- 4- *The saddlebags bolts are long enough. You will take the front bushing to install it to the rear and we supply 3 flat washers for the front bolts.*

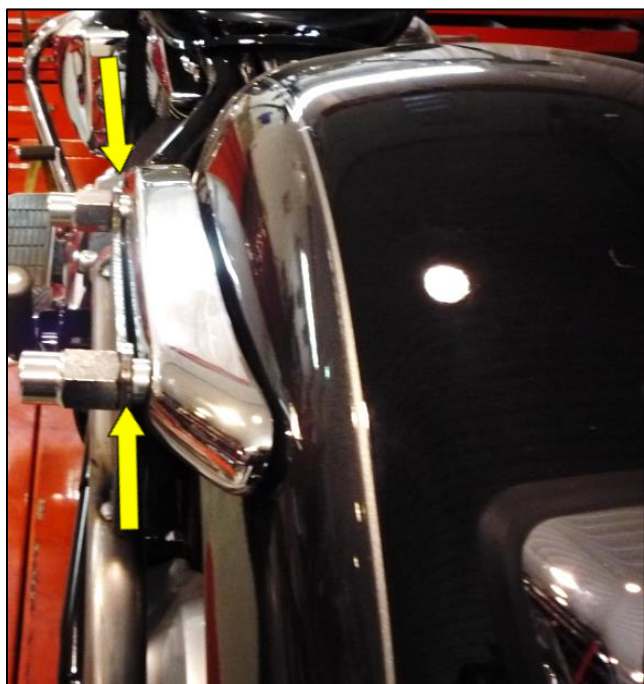

ATTENTION ! L'installateur a la responsabilité de s'assurer que tout, y compris les composantes préassemblées, soit bien serré avant d'utiliser la moto.

It is the installer's responsibility to ensure that all of the fasteners (including preassembled) are tightened before operation of the motorcycle.