
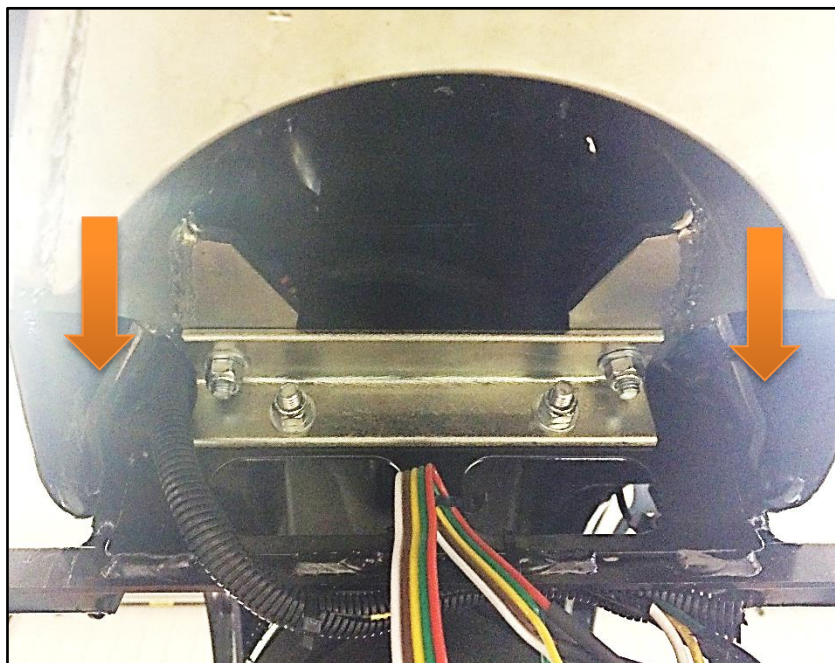


VICTORY 1700 cc Cross Country, Cross Road, Magnum 2011 +

PIECES INCLUSES		PARTS INCLUDED	
1	Attache	1	Hitch
1	Boule 1-7/8''	1	Ball 1-7/8''
1	Plaque de chaîne de sécurité	1	Safety chain plate
4	Boulons M6 X 1''	4	Bolts M6 X 1''
4	Boulons 5/16 x 1''	4	Bolts 5/16 x 1''
4	Écrous nylon 5/16	4	Lock nut 5/16
8	Rondelles 5/16	4	Washers 5/16

1. Enlever les valises.
2. Enlever les 2 boulons qui soutiennent l'aile.
3. Introduire l'attache entre l'aile et le châssis, installer le fer angle 3 faces fourni.
4. Remettre tout en place et resserrer les boulons.

- 1- *Take off the saddlebag.*
- 2- *Take off 2 bolts holding rear fender.*
- 3- *Put on the hitch between the frame and fender, install the 3 way bracket supplied.*
- 4- *Put everything in place and tighten the bolts.*

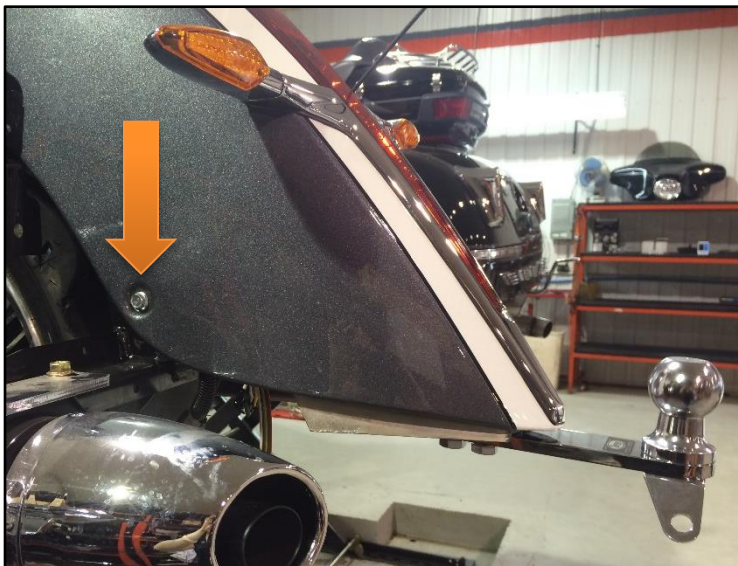

ATTENTION ! L'installateur a la responsabilité de s'assurer que tout, y compris les composantes préassemblées, soit bien serré avant d'utiliser la moto.

It is the installer's responsibility to ensure that all of the fasteners (including preassembled) are tightened before operation of the motorcycle.