


KAWASAKI Vaquero 1700 cc 2011 +

PIECES INCLUSES	PARTS INCLUDED
1 Attache	1 Hitch
1 Boule 1-7/8''	1 Ball 1-7/8''
1 Plaque de chaîne de sécurité	1 Safety chain plate
2 Boulons M8 X 1.25 X 20 MM	2 Bolts M8 X 1.25 X 20 MM
2 Rondelles 5/16	2 Washers 5/16
4 Boulons M8 x 1.25 x 40mm	4 Bolts M8 x 1.25 x 40MM
4 Rondelles frein 5/16	4 Lock washer 5/16

1. Enlever les valises.
2. Les 4 *spacers* sous les supports de mufflers devront être remis en place.
3. Placer l'attache vis-à-vis les points d'attaches correspondant.
4. Installer boulons et rondelles fournis.
5. Remettre tout en place et resserrer les boulons.

- 1- *Take off the saddlebag.*
- 2- *The 4 spacers under muffler supports must be replaced.*
- 3- *Put on the hitch according the matching bolting points.*
- 4- *Put on bolts and spacers supplied.*
- 5- *Put everything in place and tighten the bolts.*

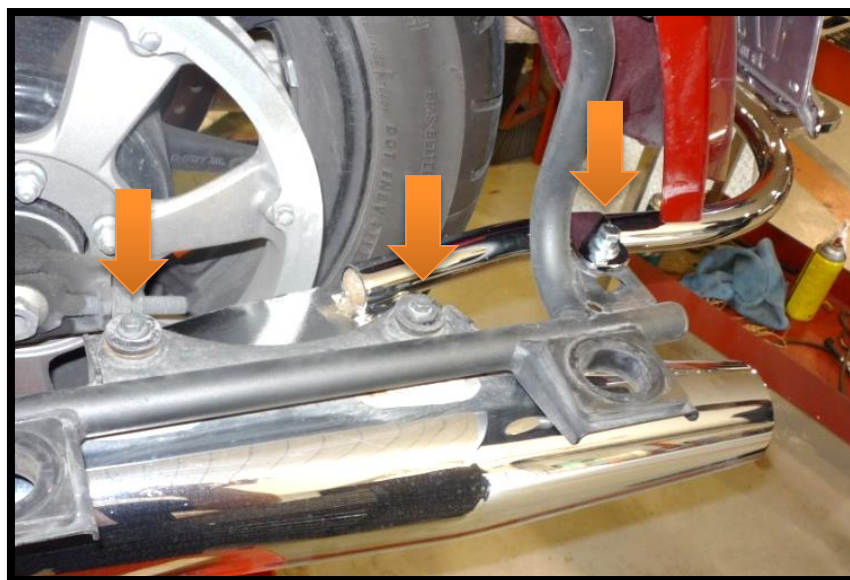

**ATTENTION !** L'installateur a la responsabilité de s'assurer que tout, y compris les composantes préassemblées, soit bien serré avant d'utiliser la moto.

*It is the installer's responsibility to ensure that all of the fasteners (including preassembled) are tightened before operation of the motorcycle.*