


Harley-Davidson 1999-2008 Flh, Flh-X, Flh-SE

PIECES INCLUSES	PARTS INCLUDED
1 Attache	1 Hitch
1 Langue	1 Receiver
1 Boule 1-7/8"	1 Ball 1-7/8"
1 Plaque de chaîne de sécurité	1 Safety chain plate
2 boulons ½ x 1"	2 Bolts ½ x 1"
2 Rondelles freins ½	2 Lock washer ½

- 1- Enlever les valises.
- 2- Installer l'attache chrome sur les supports d'aile, derrière les valises.
- 3- Utiliser les boulons d'origine.

- 1- *Remove the saddlebags.*
- 2- *Install the chrome trailer hitch onto the rear support brackets on the inside of the saddlebag trim rails.*
- 3- *Use OEM bolts and washers.*

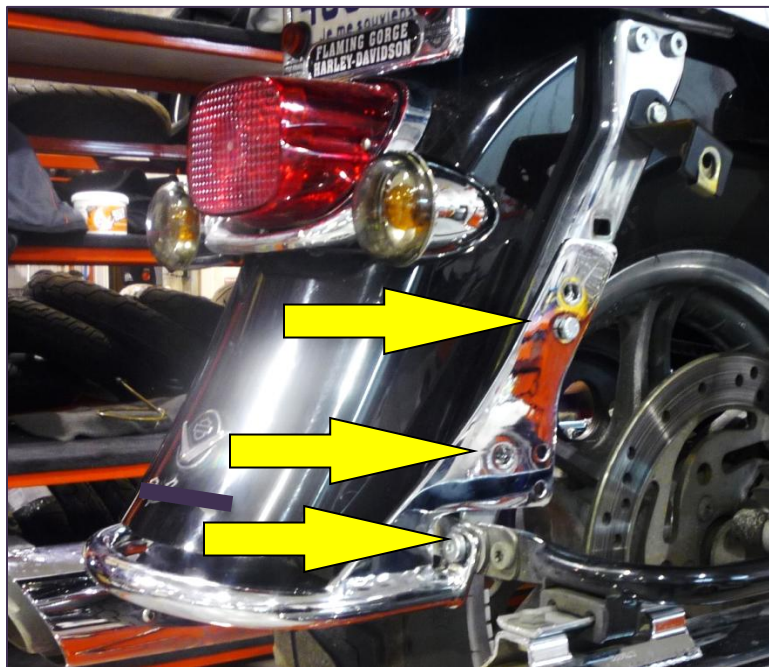

**ATTENTION !** L'installateur a la responsabilité de s'assurer que tout, y compris les composantes préassemblées, soit bien serré avant d'utiliser la moto.  
*It is the installer's responsibility to ensure that all of the fasteners (including preassembled) are tightened before operation of the motorcycle.*