


KAWASAKI 1200 cc Voyageur 1986-2003

PIECES INCLUSES	PARTS INCLUDED
1 Attache	1 Hitch
1 Boule 1-7/8''	1 Ball 1-7/8''
1 Plaque de chaîne de sécurité	1 Safety chain plate
2 Tige aluminium 13¾'' cc (2 boulons 5/16x¾'', 2 rondelles frein, 2 capuchons chrome 5/16)	2 Aluminium hangers 13¾'' cc (2 bolts 5/16x¾'', 2 lock washers, 2 cap nut 5/16)
2 Boulons en U ¼x20	2 U-Bolts ¼x 20
4 Écrous nylon ¼	4 Lock nut ¼

- 1- Enlever les valises.
- 2- Fixer le cadre de la moto à l'attache à l'aide des boulons en "U".
- 3- Les bras d'aluminium s'installent sur les boulons 10mm qui supportent l'aile au cadre de la moto (les installer entre l'aile et le cadre).

- 1- *Take off bags.*
- 2- *Install u-bolts above the frame into the hitch.*
- 3- *The 10mm bolts that hold the fender to the frame, the aluminium bars bolt between the frame and the fender.*

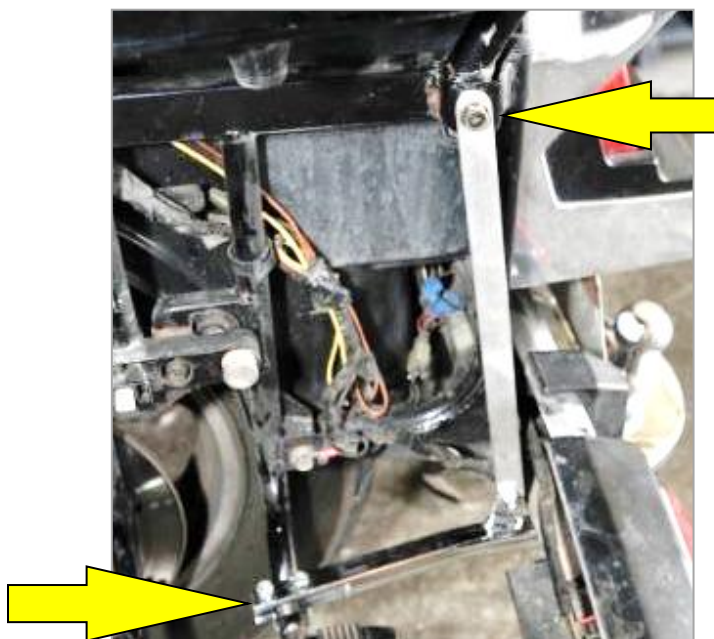

ATTENTION ! L'installateur a la responsabilité de s'assurer que tout, y compris les composantes préassemblées, soit bien serré avant d'utiliser la moto.

It is the installer's responsibility to ensure that all of the fasteners (including preassembled) are tightened before operation of the motorcycle.